

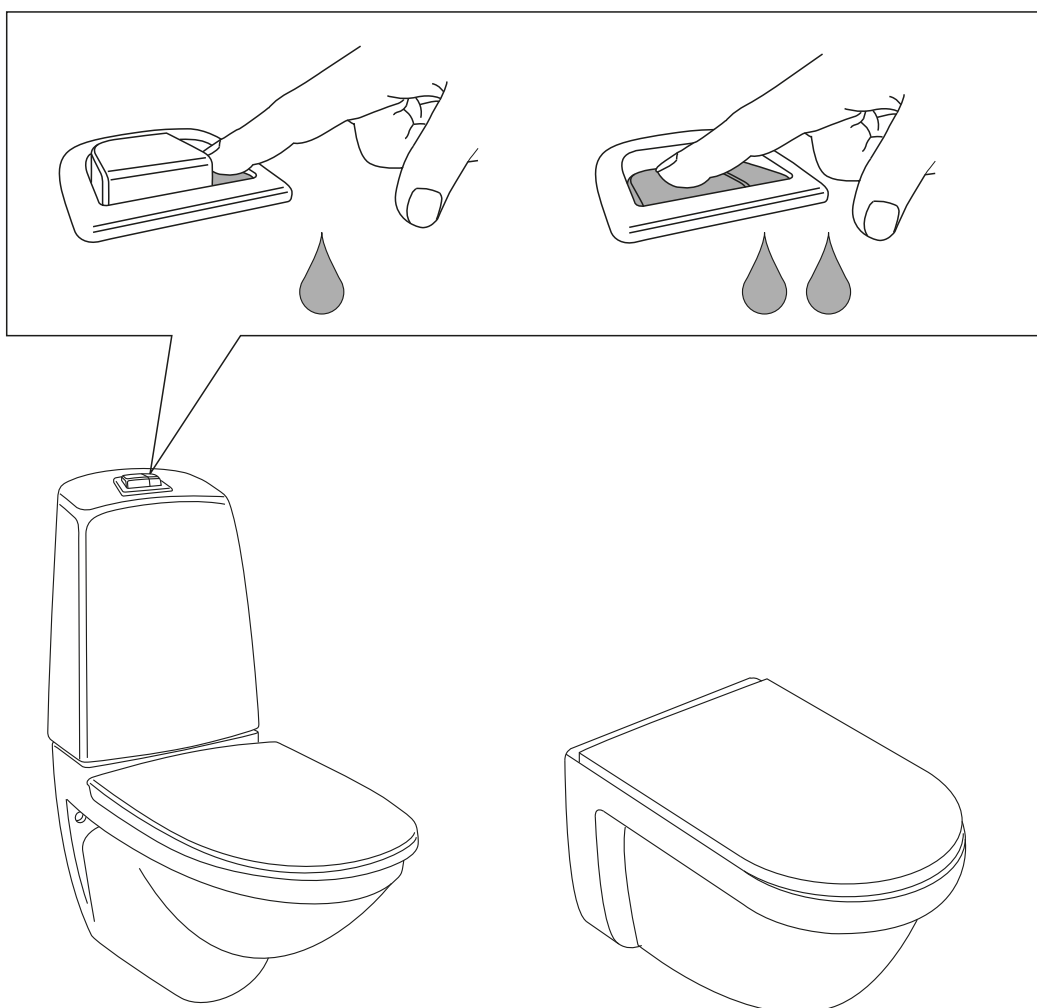


- SE MONTERINGSANVISNING VÄGGHÄNGD WC
 DK MONTERINGSVEJLEDNING VÆGMONTERET WC
 NO MONTERINGSANVISNING VEGGHENGT WC
 FI ASENNUSOHJE, SEINÄ-WC
 EN INSTALLATION INSTRUCTIONS WALL HUNG WC
 EE PAIGALDUSJUHISED SEINA WC-DELE
 LV UZSTĀDĪŠANAS INSTRUKCIJA PIEKARAMAM PODAM
 LT MONTUOJAMO Į SIENĄ UNITAZO MONTAVIMO INSTRUKCIJA
 RU Данная инструкция применяется для всех подвесных унитазов











GUSTAVSBERG /
 SMARTER BATHROOMS


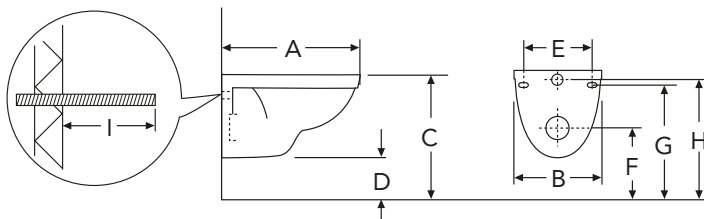


Accepterad
 monteringsanvisning
 2021:1










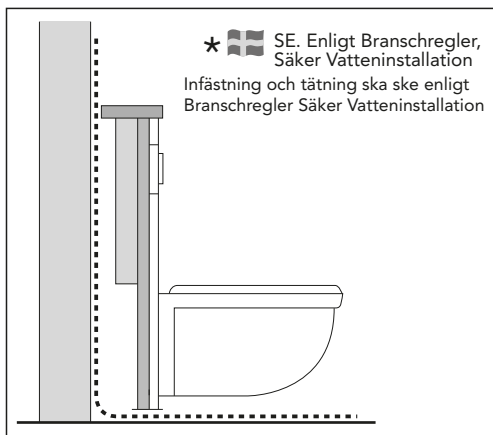


Models	A	B	C	D	E	F	G	H	I
4330	530	370	410	50	180/230	220	320	355	90
5530	500	340	400	45	180/230	220	320	355	60
5693	505	305	400	55	180/230	220	320	355	50
5G84	530	370	410	85	180	220	320	355	70
3635	490	360	410	60	180	220	320	355	60
7G48	490	360	410	60	180	220	320	355	60
7G06	535	355	410	55	180	220	320	355	60
3530	535	355	410	55	180	220	320	355	60
3630	540	360	410	60	180	220	320	355	60
7G47	540	360	410	60	180	220	320	355	60
4G01	700	360	400	55	180	220	320	355	100
4G95	595	360	460	55	180	220	320	355	100

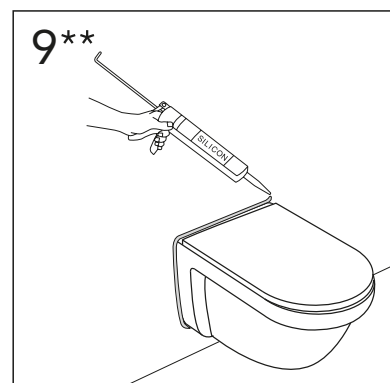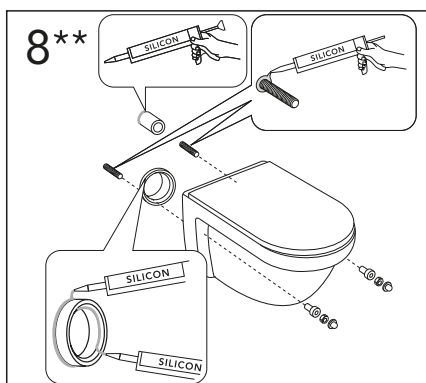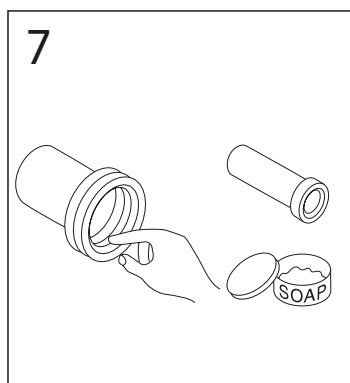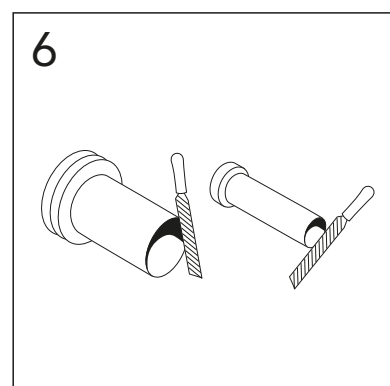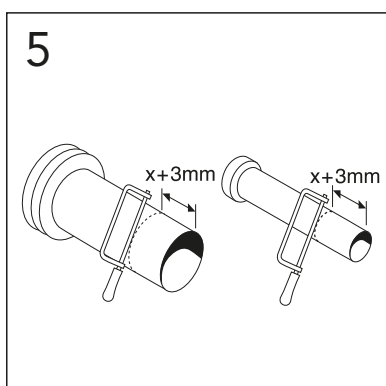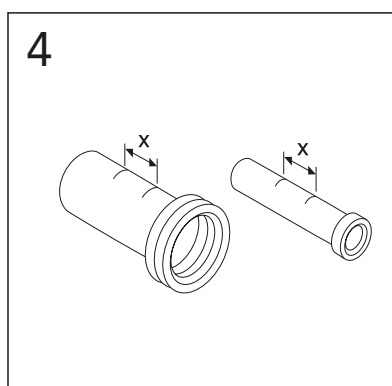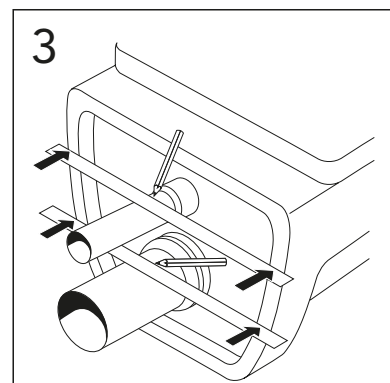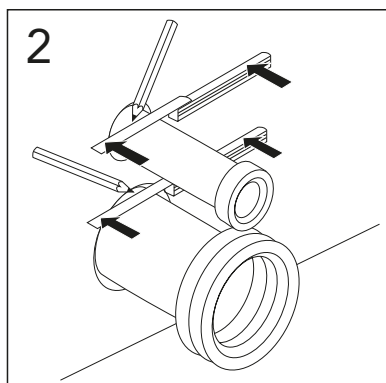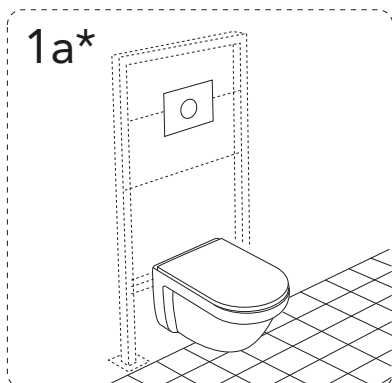

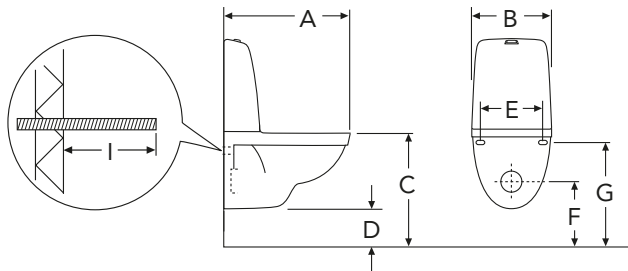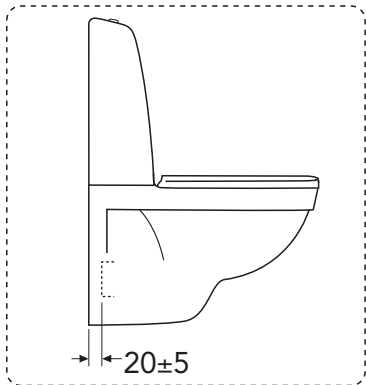

Models	A	B	C	D	E	F	G	I
1522/5522	700	345	400	50	180/230	220	320	60

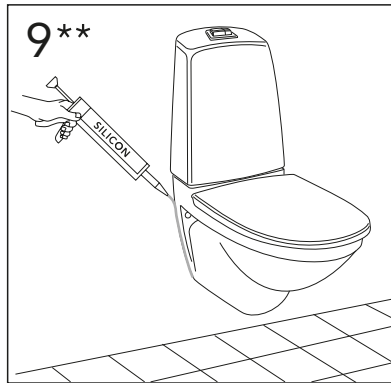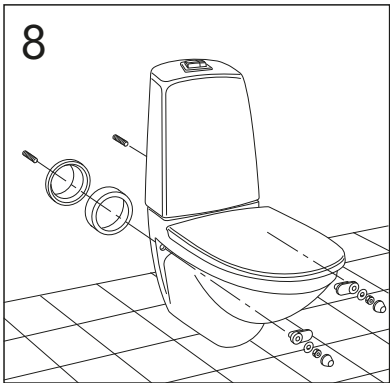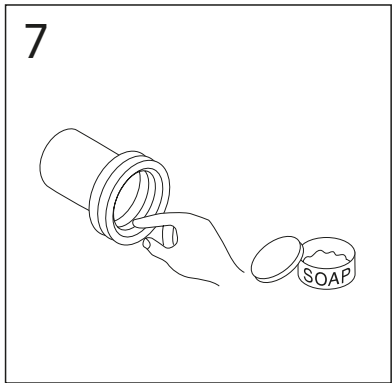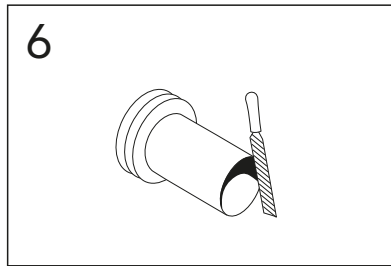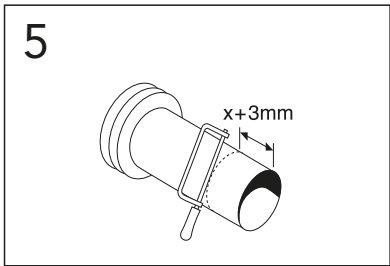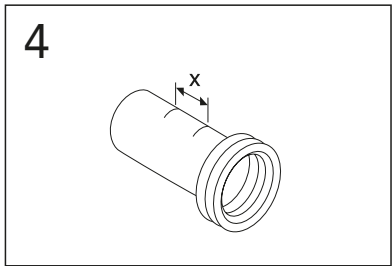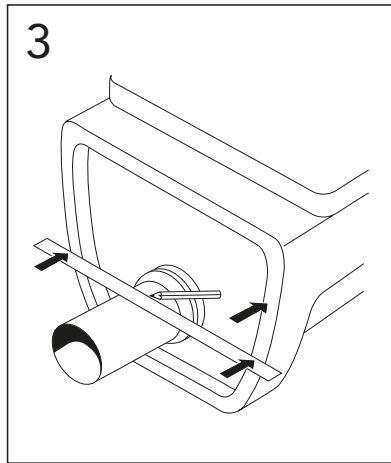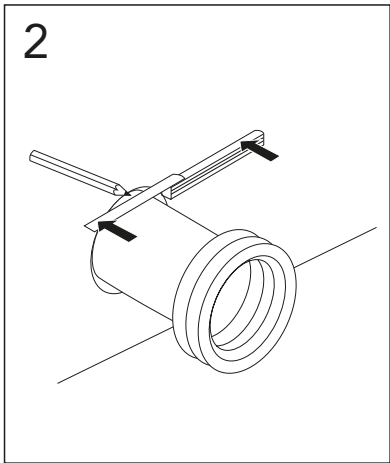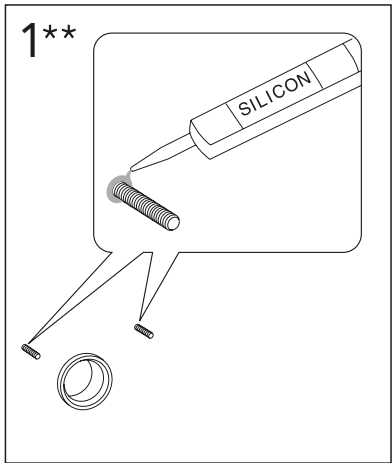



RESERVDELAR.
RESERVEDELER.
RESERVEDELE.
VARAOSAT.
SPARE PARTS.
VARUOSAD.
ATSARGINĖS DALYS.
REZERVES DAĻAS.
ЗАПАСНЫЕ ЧАСТИ.



DRIFT & SKÖTSEL
DRIFT OG VEDLIGEHOELDELSE
DRIFT OG VEDLIKEHOLD
ASENNUS-, KÄYTTÖ- JA HOITO-OHJEET
ASSEMBLY AND MAINTENANCE
PAIGALDAMINE & HOOLDAMINE
MONTAZA UN KOPSANA
MONTAVIMAS IR PRIEŽIURA
УСТАНОВКА И УХОД

